



890 Quickstart Manual

**890CS/CD (Common Bus) Drives
Frames B, C & D**


HA471072U000 Issue 2 (ISO A4)
HA471072U001 Issue 2 (American Quarto)



Contents

	<i>Page</i>
Safety	3
Introduction	5
Installation	7
Dimensions	8
Ventilation.....	8
Environmental Conditions	8
Overview	9
890CS Power Connections	10
890CD Power Connections	11
SSD_Rail Connections	12
Busbar Installation	12
890CS Control Connections	13
890CD Control Connections	14
890CD Feedback Connections	15
Drive Start-up	16
Before Applying Power :	16
Powering-up the 890CS.....	17
Powering-up each 890CD.....	17
890CD Set-up	18
Motor Data	18
Quick Setup Parameters.....	18
Autotune.....	19
Running in Local	20
Running in Remote	20
Appendix A: Using the 6511 Keypad	21
The Menu Structure	22
890CS	22
890CD	23
Appendix B: Using the 6901 Keypad	24
The Menu Structure	25
890CD	25
890CS	25
Appendix C: Analog and Digital I/O	26
890CD Control Connections	26
890CD Control terminals	27
890CS Control Terminals	28
Appendix D: Electrical Ratings	29


Safety

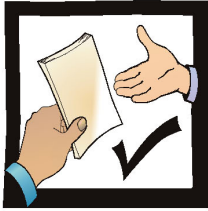


This manual is for anyone installing and operating this unit.




You must be technically competent to install and operate this unit.

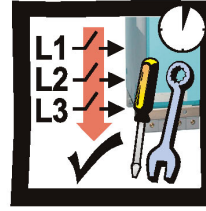


Before working on the unit, isolate the mains supply from terminals L1, L2 and L3 and wait 3 minutes.

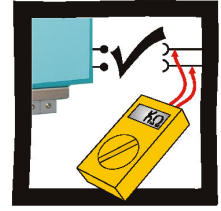

Disconnect the unit from circuits when doing high voltage resistance checks.

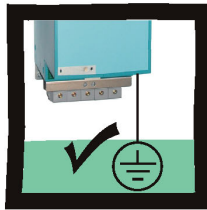

The unit must be **permanently earthed** due to the high earth leakage current.

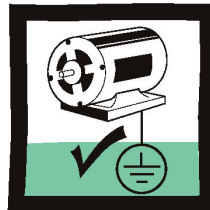

The drive motor must be connected to an appropriate safety earth.



Electrostatic discharge sensitive parts : observe static control precautions.



Copy existing 890 parameters to any replacement 890 unit

Hazards to Personnel

WARNING!

This equipment can endanger life through rotating machinery and high voltages. Failure to observe the following will constitute an ELECTRICAL SHOCK HAZARD.

Metal parts may reach a temperature of 70 degrees Centigrade in operation.

Before working on the equipment, ensure isolation of the mains supply from terminals L1, L2 and L3. The equipment contains high value capacitors which discharge slowly after removal of the mains supply. Wait for at least 3 minutes for the dc link terminals (DC+ and DC-) to discharge to safe voltage levels (<50V). Measure the DC+ and DC- terminal voltage with a meter to confirm that the voltage is less than 50V.

Do not apply external voltage sources (mains supply or otherwise) to any of the braking terminals (DBR+, DBR-). This can cause extensive damage to the drive and installation, and risk to personnel.



Application Risk

The specifications, processes and circuitry described herein are for guidance only and may need to be adapted to the user's specific application.

SSD Drives does not guarantee the suitability of the equipment described in the Manual for individual applications.

IMPORTANT: This product is designated as "professional equipment" as defined in EN61000-3-2. Permission of the supply authority shall be obtained before connection to the low voltage supply.

Risk Assessment

Under fault conditions, power loss or other operating conditions not intended, the equipment may not operate as specified. In particular:

- The motor speed may not be controlled
- The direction of rotation of the motor may not be controlled
- The motor may be energised

Accessibility

All live power terminals are IP20 rated only, since the equipment is intended to be installed within a normally-closed cubicle or enclosure, which itself requires a tool to open.

Protective Insulation

- All control and signal terminals are SELV, i.e. protected by double insulation. Ensure all wiring is rated for the highest system voltage.

Note Thermal sensors contained within the motor must be single/basic insulated.

- All exposed metalwork in the Drive is protected by basic insulation and bonding to a safety earth.

RCDs

Not recommended for use with this product. Where their use is mandatory, use only Type B RCDs (EN61009).

Caution

This is a product of the restricted sales distribution class according to BS EN 61800-3. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Introduction

The 890 Common Bus units are designed for speed control of standard ac 3-phase motors. The common bus scheme consists of one 890CS (Common Bus Supply) and one or more 890CD (Common Bus Drives).

3-phase power is supplied to the 890CS. Power (DC) is bussed from the 890CS to all 890CDs using the **SSD_Rail** busbar system. A motor is connected to each 890CD unit.

- Control the system remotely using configurable analogue and digital inputs and outputs.
- Control the 890CD locally using the 6511 Keypad.
- Use the Design System Explorer Configuration Tool (DSE 890) to give access to 890CD parameters, diagnostic messages, trip settings and application programming.
- Fit Options to the 890CD to give serial communications and closed loop speed control.

IMPORTANT: Motors used must be suitable for Inverter duty.

About this QuickStart

This QuickStart will:

- Familiarise you with the terminals and operation of the unit.
- Provide ***basic** installation details and a quick set-up procedure.
- Show you how to Autotune the 890CD and start the motor.

** Because the 890 is a system product and we have no knowledge of your application, we detail the quickest way to power-up the drive using a simple earthing scheme with minimal control wiring. Refer to the full Engineering Reference Manual for items not covered in this QuickStart.*

Provided with every 890 unit is a :

- Quickstart
- Compact disk containing the Engineering Reference Manual and DSE Configuration Tool
- 890 Installation Kit and instruction leaflet
- 6511 Keypad
- Customer-ordered Options

This QuickStart assumes that:


- You are a qualified technician with experience of installing this type of equipment.
- You are familiar with the relevant standards and Local Electric Codes (which take precedence).
- You have read and understood the Safety information provided at the front of this QuickStart.
- You realise that this guide contains only basic information and that you may need to refer to the Engineering Reference Guide to complete your installation.



SSD_Rail


Since the height and depth of every module is the same, it is very convenient to assemble drives of varying frame sizes into one common bus system. Typically they are installed side-by-side.

SSD_Rail is an innovative busbar system that connects the DC+ and DC- terminals of all drives on a common bus without the use of wire.

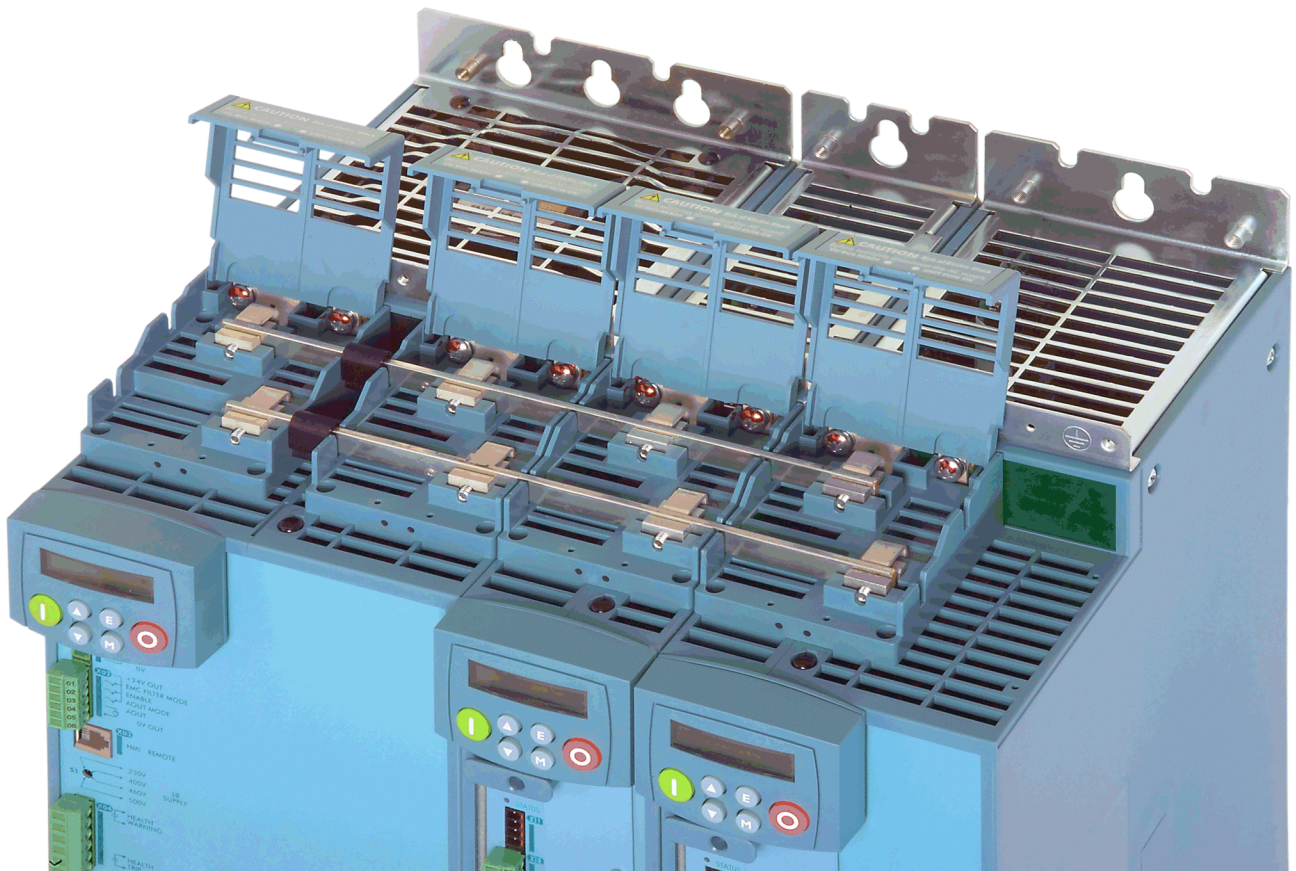

Installation

A simplified installation is shown below. This installation is **not** EMC compliant. For European installations and countries with EMC legislation refer to the 890 Engineering Reference Manual, Appendix C.

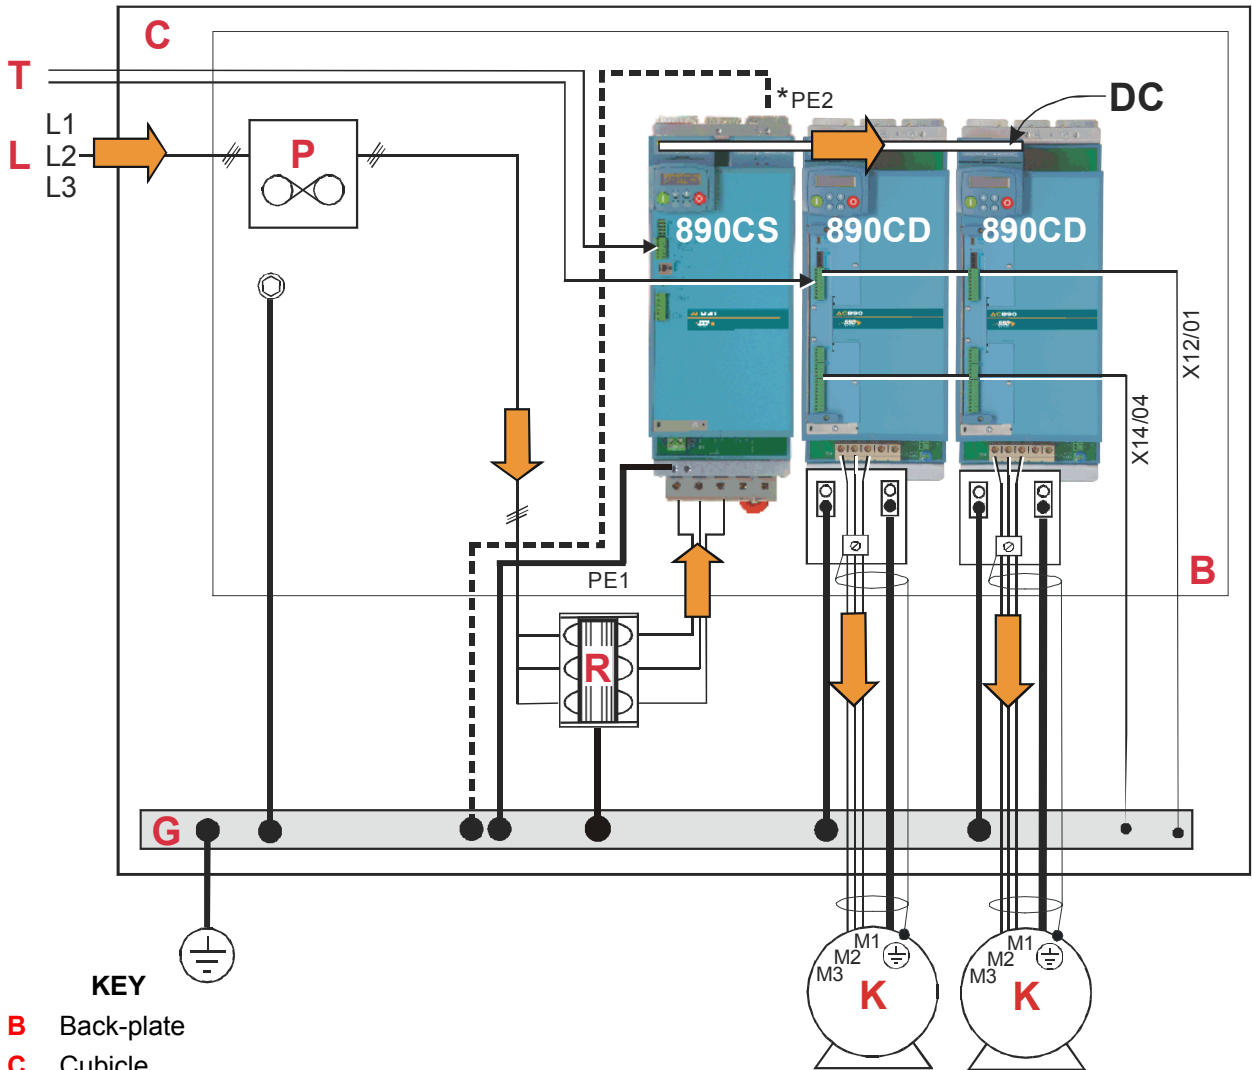

- KEY**
- B** Back-plate
 - C** Cubicle
 - Supply
 - G** Protective Earth/Ground
 - K** Motor (M1, M2, M3)
 - 3Ø Power
 - L** Supply Cable (L1, L2, L3)
 - P** Fuse or circuit breaker
 - R** AC Line Reactor
 - T** Control Wiring Terminals

890 Installation Kit

The 890 Installation Kit is shown in the diagram attached to the bottom of the 890CD units. It can also be fixed to the top of the unit.


The kit provides several options for earth/ground connections. It also includes the brackets for DIN rail mounting the unit. Refer to the instructions in the kit and use the appropriate parts.

* Permanent Earthing

The unit must be **permanently earthed** according to EN 50178: A cross-section conductor of at least 10mm² is required. This can be achieved either by using a single conductor (PE) or by laying a second conductor though separate terminals (PE2 where provided) and electrically in parallel.



Dimensions

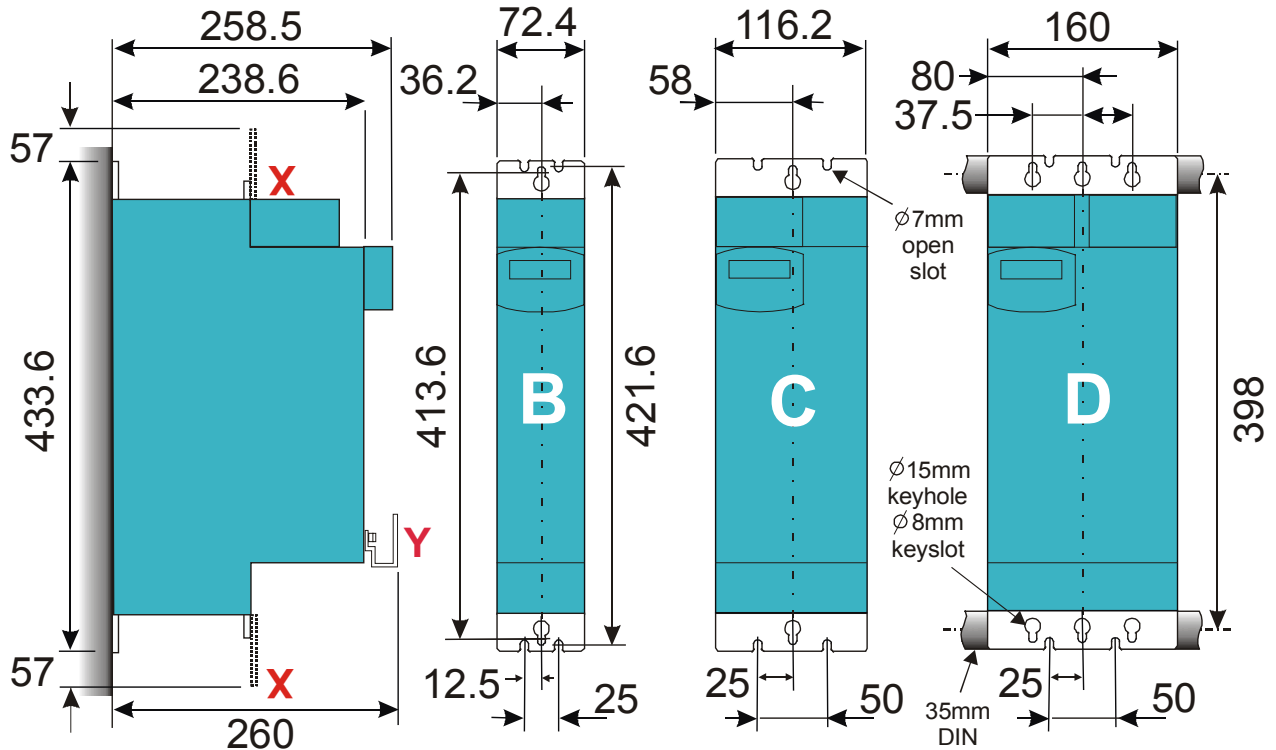


Dimensions are in millimeters (X: Power Bracket - 890 Installation Kit)

The units must be installed in a cubicle. Mount the drive using the keyholes and slots or on a 35mm DIN rail using the 890 Installation Kit supplied.

IMPORTANT: The 890CS Common Bus Supply is normally mounted to the left of the 890CD Common Bus Drive(s). However, for 890CS Frame D, mount the 890CS between the 890CD units to share the load evenly if the total current draw on the DC busbar will exceed 140A. Connect to the left and right busbar terminals separately. The busbar is rated for operation at 140A. Do not exceed 140A.

Ventilation

The drives can be mounted side-by-side with no clearance. A minimum of 150mm (6 inches) free-air space must be allowed at the top and bottom of each drive. If mounting drives above or below other equipment, the top and bottom distances should be added for overall clearance between drives.

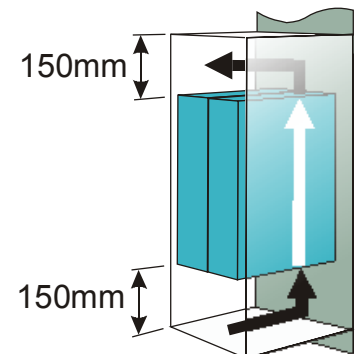


Environmental Conditions

Operating ambient temperature 0°C to 45°C (32°F to 113°F)

Enclosure rating
Atmosphere

IP20 – UL(cUL) Open type
Dust free, non flammable, non-corrosive, <85% humidity, non-condensing

Overview

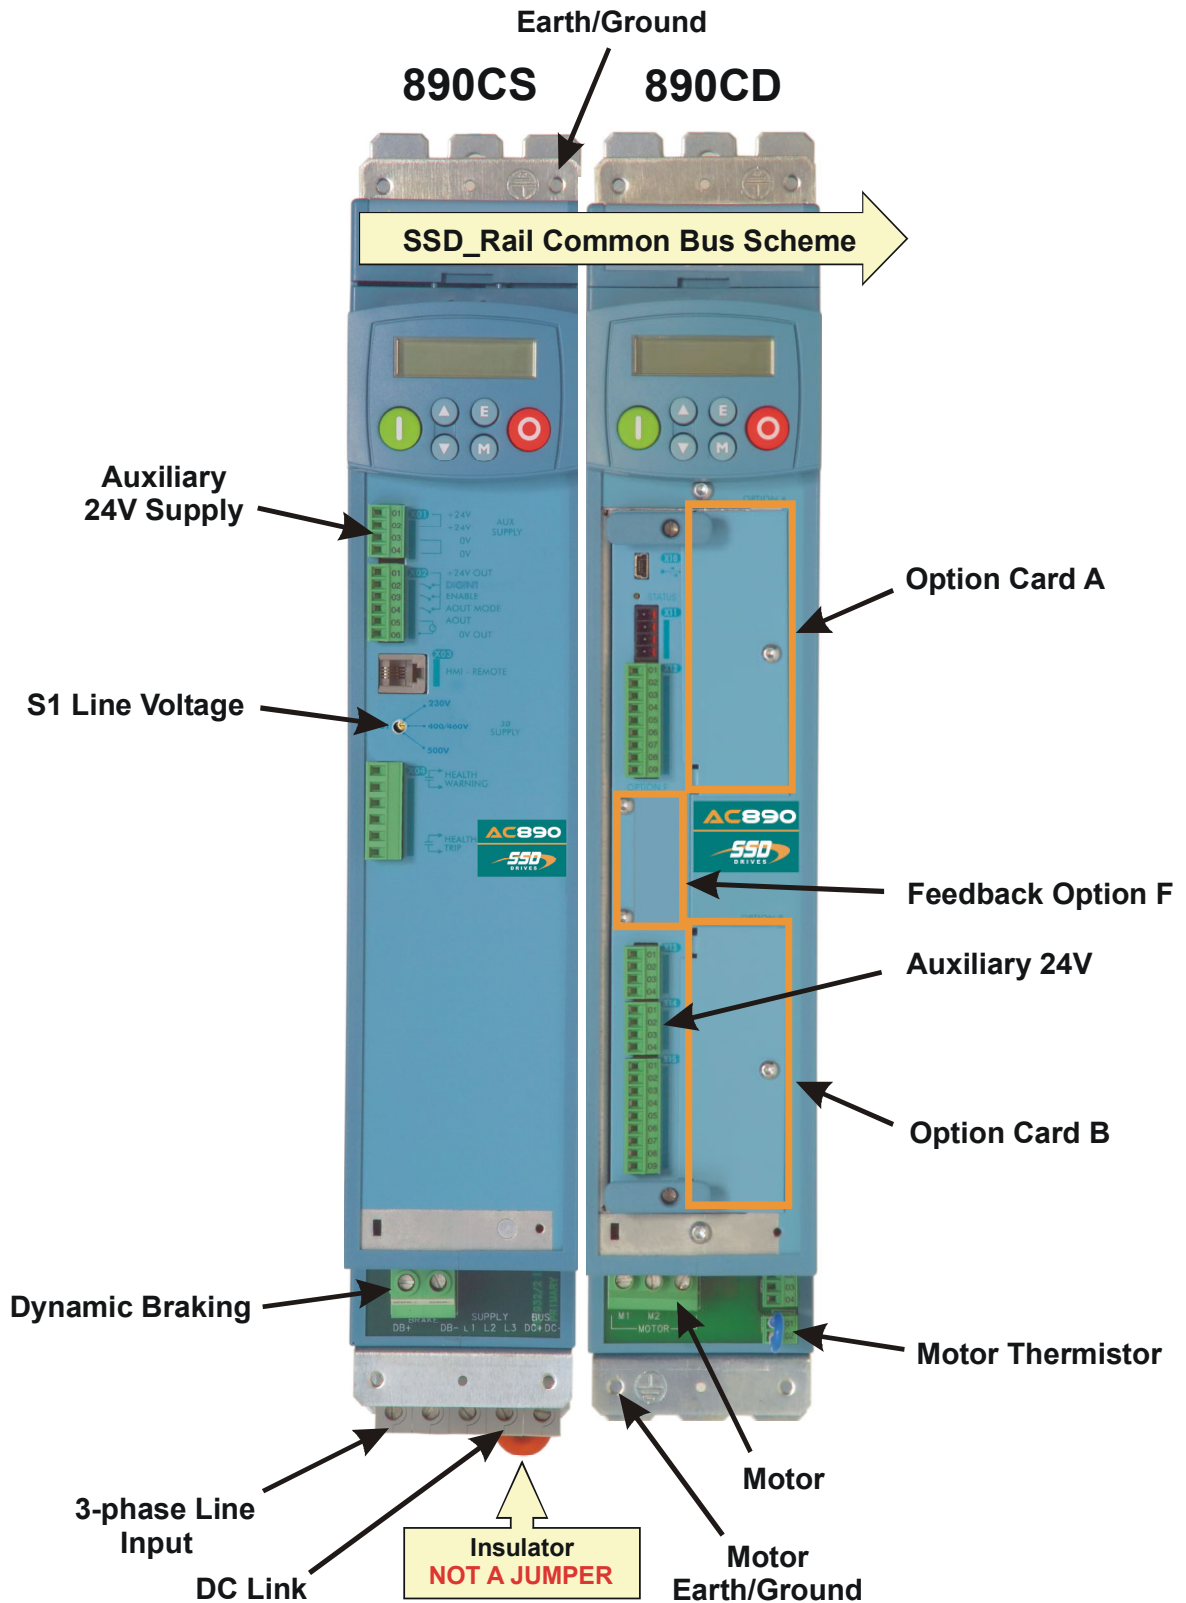



890CS Power Connections

1 Connect 3-phase power in any order to L1, L2, L3. Maximum wire sizes:

- Frame B1: 10mm²/8AWG
- Frame B2: 16mm²/4AWG
- Frame D1: 50mm²/ 1/0AWG
- Frame D2: 95mm²/ 4/0AWG

- A 3% line reactor **MUST** be fitted.
- Use branch circuit protection (circuit breaker and/or fuses)


Refer to Appendix D for Drive Rating details

2 Connect the earth/ground wire to the bottom ground bracket. Maximum wire sizes:

- Frame B1: 10mm²/8AWG
- Frame B2: 16mm²/4AWG
- Frame D1: 50mm²/ 1/0AWG
- Frame D2: 95mm²/ 4/0AWG

3 An External Braking Resistor is optional. Connect it between DBR+ and DBR- for high inertial loads. We recommend using a thermal overload switch to protect the braking circuit.

DO NOT apply external voltage sources (mains supply or otherwise) to the braking terminals.

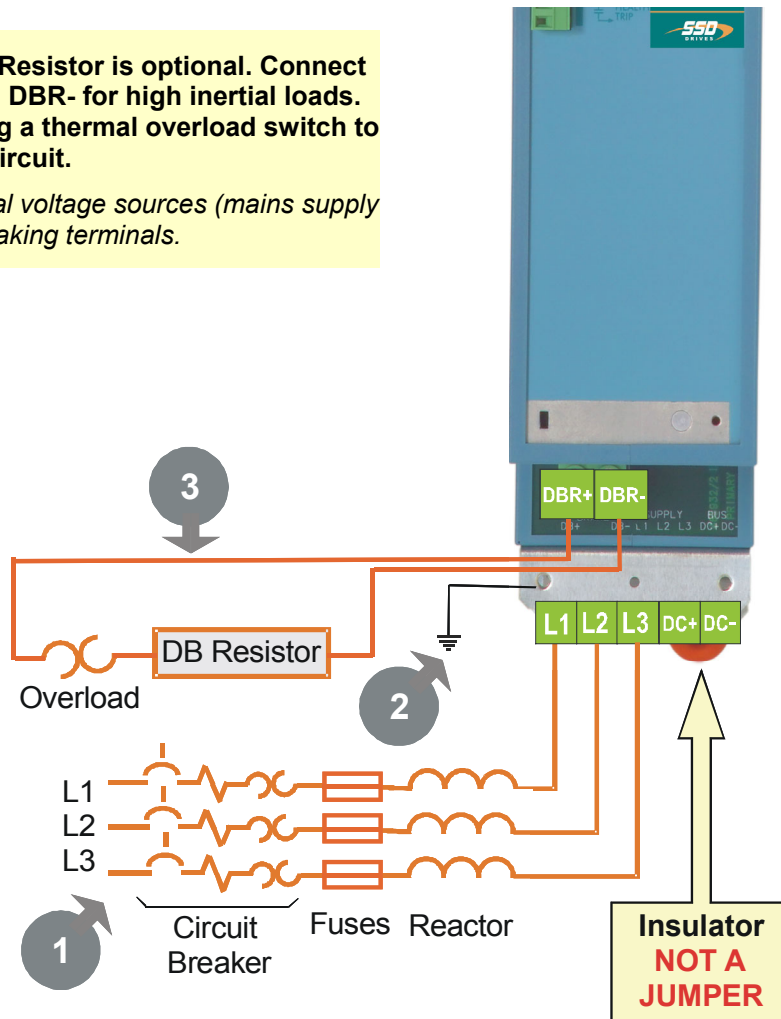

890CD Power Connections

4 Connect motor leads to M1, M2, M3.

Maximum wire sizes::

Frame B: 4mm²/12AWG

Frame C: 10mm²/8AWG

Frame D: 16mm²/4AWG

- Connect the earth/ground wire from the terminal box of the motor directly to the bottom ground bracket.

Maximum wire sizes:

Frame B: 4mm²/12AWG

Frame C: 10mm²/8AWG

Frame D: 16mm²/4AWG

- If not using shielded cable, run motor leads in an enclosed metal conduit grounded at both ends

6 Connect motor thermal switch or thermistor to Th1, Th2. Drive will trip when the thermal switch opens, or when the thermistor resistance exceeds 4kΩ maximum (PTC Type A : IEC 34-11 Part 2)

- If the motor does not have a protective device (thermistor), jumper these terminals. The drive needs the thermistor inputs connected for it to run.

7 Connect the 24V DC brake supply to terminals 1 and 2, and connect the brake terminals to 3 and 4. The brake coil is energized when the drive runs.


5 Connect the earth/ground wire to the bottom ground bracket.

Maximum wire sizes:

Frame B: 4mm²/12AWG

Frame C: 10mm²/8AWG

Frame D: 16mm²/4AWG

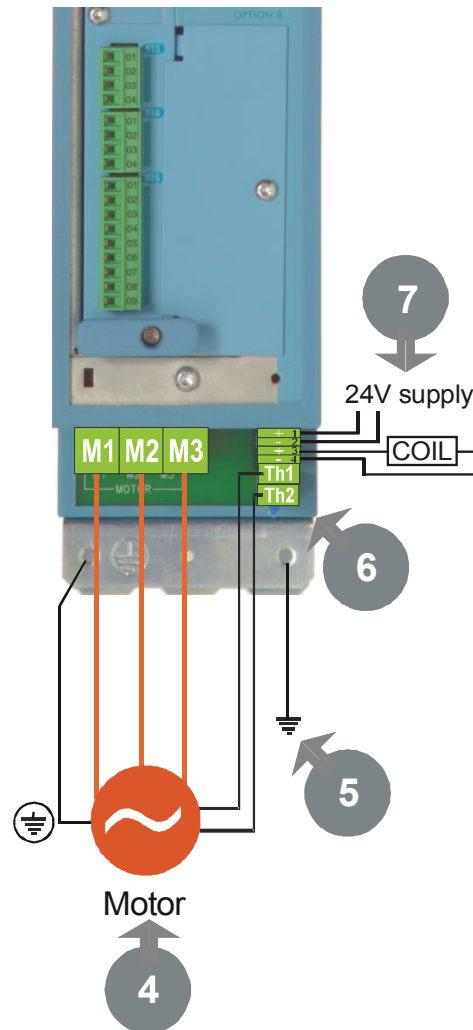

SSD_Rail Connections

WARNING!

During commissioning, remove the fuses (or trip the circuit breaker) on your 3-phase supply. Make sure the power is OFF, and that it cannot be switched on accidentally whilst you are working.

Caution

All 890 units connected to the DC bus must be rated for the same 3Ø operating voltage.


The following items are available from SSD Drives:

- Busbar : Part No. BH465850 - 1m length, 10mm x 3mm copper
- Busbar Insulator : Part No. BC465938U200 - 200mm length

The bus bar is rated at 140 Amps.

Busbar Installation

1. Simply select two correct lengths of the busbars and drop them in the slots shown in the close-up top view. Secure with two screws (2.0 Nm), shown by the arrows. Fit insulating sleeve to any busbar that protrudes from the units.
2. **For your safety and EMC compliance:**
 - ◆ **Busbar:** both ends of the bar must be inserted into a terminal – with NO OVERHANG if a terminating piece.
 - ◆ **Insulator:** Fit this to all busbar external of the unit. It should butt-up to the sides of each unit. Press it firmly down onto the busbar for complete protection.
3. Close all Busbar Terminal Covers. They snap shut.

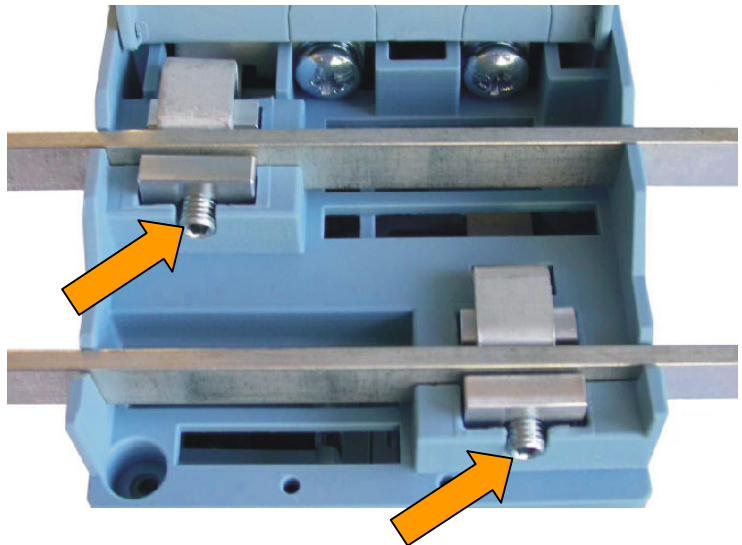

890CS Control Connections

A Voltage Selection

Use a small slotted screwdriver to set the rotary switch S1 to match the voltage of the incoming 3-phase power.

NOTE: This is factory set to 500V. This MUST be set to the incoming line voltage.

B 24V Aux Supply

- Connect a 24VDC power supply across terminals X01/01 and X01/04 (mandatory).

24VDC in terminal X01/01
0VDC in terminal X01/04


- Run 24VDC power to supply 890CDs (optional).

24VDC out terminal X01/02
0VDC out terminal X01/03

C Sequencing

Connect a volt-free contact


- RUN (maintained contact) across terminals X02/01 and X02/03

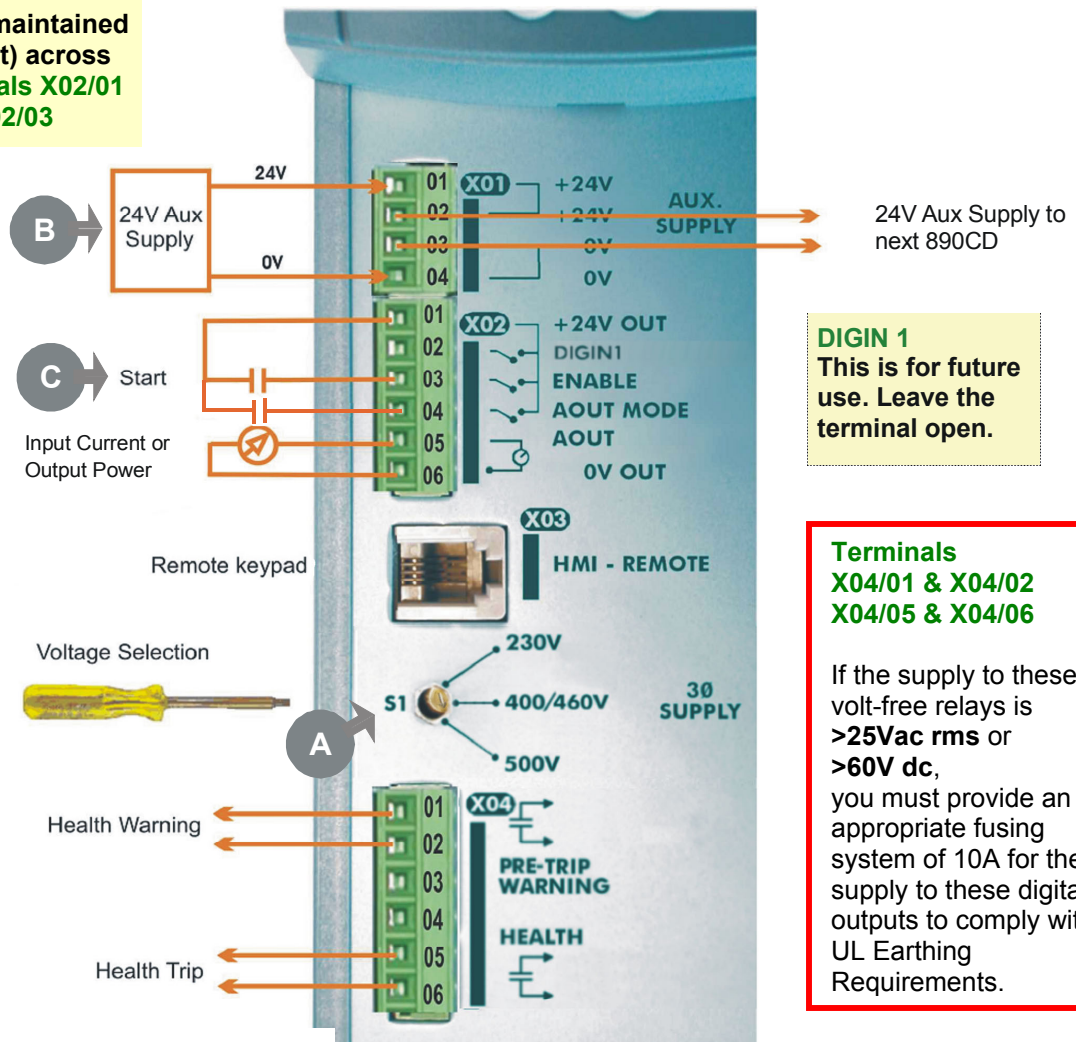

Indication

- Terminals X02/05 and X02/06 provide an analog output proportional to Input Current or Power.
- Terminals X04/01 and X04/02 provide a Health warning contact signalling an impending fault.
- Terminals X04/05 and X04/06 provide a Health Trip contact signalling the drive has faulted.

890CD Control Connections

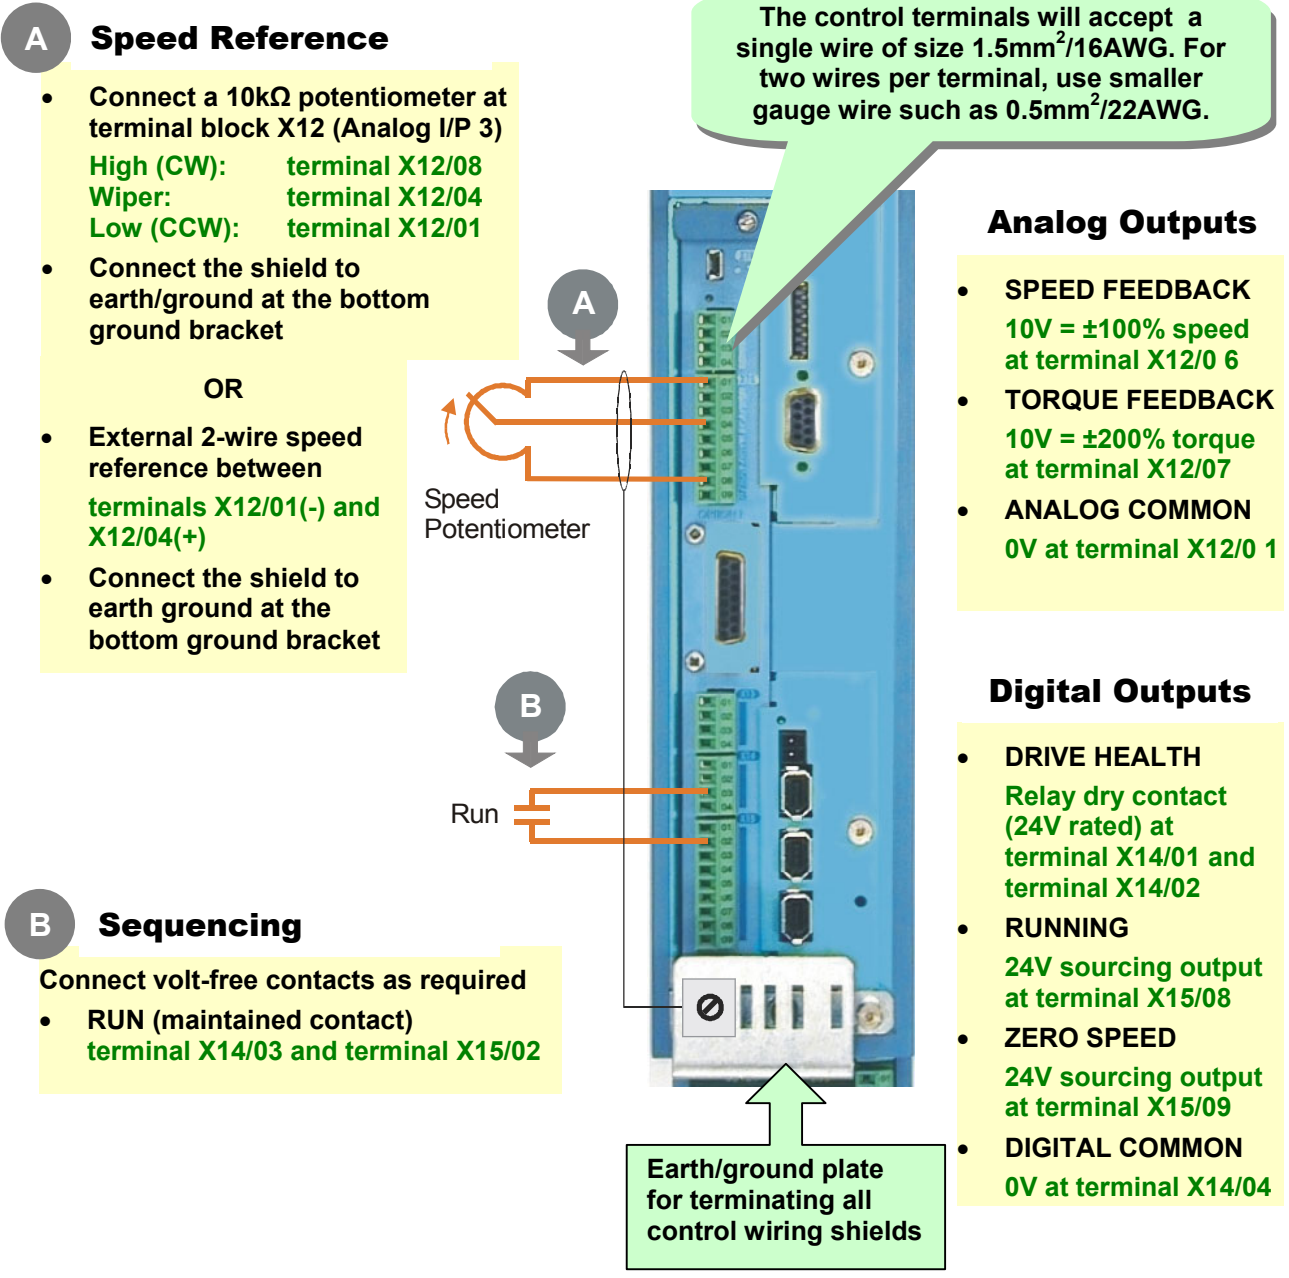

This is a basic connection diagram.
For more detailed information on control connections, refer to Appendix C.

890CD Feedback Connections

This section is only for closed loop vector and induction servo applications. Skip this page if there is no encoder or resolver mounted on the motor.

Incremental Pulse Encoders

The default settings for the drive are for 2048 line, quadrature, incremental pulse encoders with differential outputs operating from a 10VDC supply.

- Z channel (Marker pulse) connections are not necessary for running the drive, but inputs are provided for positioning and servo applications. The supply voltage to the encoder is set in the Quick Setup menu. Range 10 VDC to 20 VDC

Use the Keypad to set the following options:

Supply Voltage - PULSE ENC VOLTS (S17)


Number of lines per revolution - ENCODER LINES parameter (S18)

* Encoder direction - ENCODER INVERT (S19)


** Used to match the encoder direction to the motor direction. When TRUE, changes the sign of the measured speed and the direction of the position count. It is necessary to set up this parameter when in CLOSED-LOOP VEC mode, as the encoder direction must be correct for this mode to operate.*

Using other types of encoders requires the DSE Configuration Tool and the setting of other parameters. Refer to the 890 Engineering Reference Manual for details of these parameters.

Use 3-pair or 4-pair, individually shielded encoder cable, Belden model 8777 or equivalent.

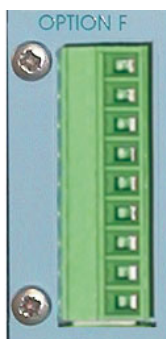

OPTION F Terminal Block	
01	Shield
02	Supply -
03	Supply +
04	Channel Z/
05	Channel Z
06	Channel B/
07	Channel B
08	Channel A/
09	Channel A

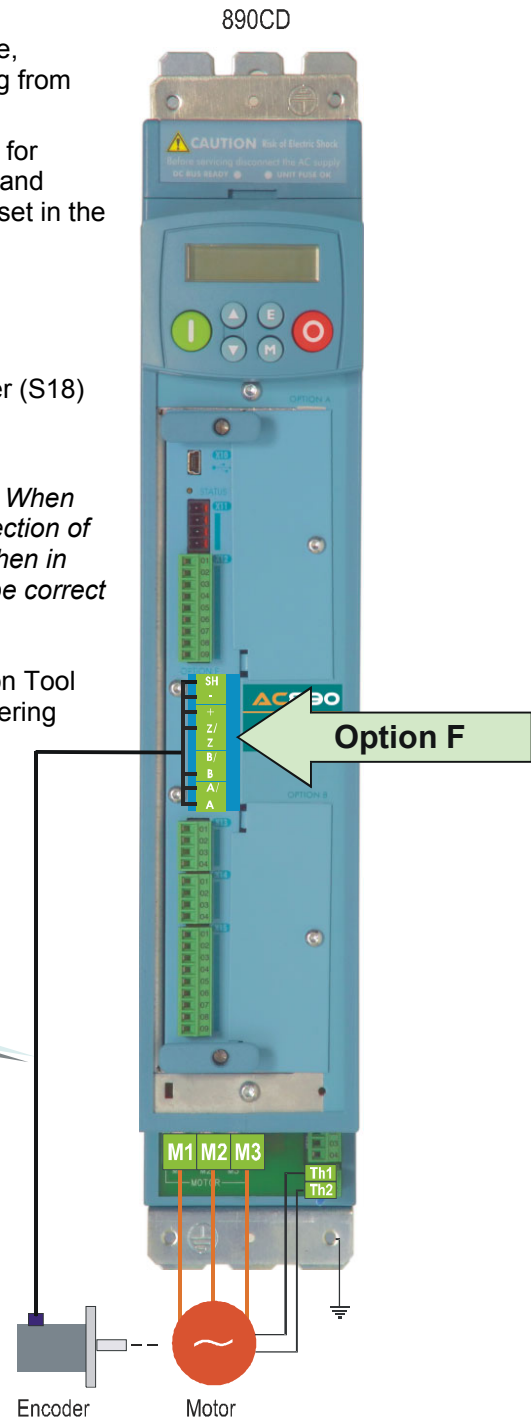



Drive Start-up

Before Applying Power :

- Read the Safety section at the front of the QuickStart.
- Ensure that all local electric codes are met.
- Check for damage to equipment.
- Check for loose ends, clippings, filings, drilling swarf etc. lodged in the drive and system.
- Check all external wiring circuits of the system - power, control, motor and earth connections.
- Ensure that unexpected rotation of the motor in either direction will not result in damage, bodily harm or injury. Disconnect the load from the motor shaft, if possible.
- Check the state of the Motor Thermistor and Brake Resistor connectors. Check external run contacts are open. Check external speed setpoints are all at zero.
- Ensure that nobody is working on another part of the system which will be affected by powering up.
- Ensure that other equipment will not be adversely affected by powering up.
- Check motor stator connections are correctly wired for for Star or Delta as necessary for drive output voltage.
- Check motor stator connections are correctly wired for for Star or Delta as necessary for drive output voltage.
- Ensure that the SSD_Rail has been correctly installed and securely fastened.
- On the 890CS drive, set the line voltage on rotary switch S1.

If all connections have been checked, it is time to **POWER-UP the drive**

Powering-up the 890CS

Initial Power-up Sequence

1. **A three-phase supply is NOT necessary at this stage.**
2. Before applying 3-phase power, ensure that an appropriate 3% line reactor has been fitted. This is a pre-requisite of any input section.
3. Ensure ENABLE is low, (0V), X02/03 (connect a temporary switch or remove terminal block).
4. Switch on the 24VDC auxiliary power supply to the 890CS drive. If daisy-chained to the 890CD's, these will also power-up in Remote Mode and display a DCLO trip (expected).
5. Check the voltage setting on the 890CS keypad (it will appear as soon as you apply power) and ensure it matches your incoming line voltage. If not, switch off the 24VDC, correct the setting of rotary voltage selector switch S1 then switch the 24VDC back on.
6. There are no parameters to set-up the 890CS unit.
7. Check that the run signal on each 890CD is inactive, unless motor rotation is required at this time.
8. **At this stage, apply 3-phase power to the 890CS.** Changing ENABLE to high (24V OUT), will cause the 890CS to power up the SSD_Rail.
9. Pressing the STOP key on each 890CD will clear the DCLO trip.

Normal Power-up Sequence

The simplest way to power up the 890CS is to connect the ENABLE input to 24V OUT then power up the 3-phase power and the 24VDC auxiliary power supply together. The 890CS will immediately power up the SSD_Rail.

Powering-up each 890CD

1. By now, the whole system has power applied to it.
2. The following sections cover getting the pertinent motor data, setting the appropriate parameters (using the keypad) and performing an autotune.



890CD Set-up

Refer to Appendix A if using the 6511 keypad supplied with the drive. Appendix B contains information about the 6901 keypad that displays menu and parameter names in English.

Motor Data

Before attempting to set up the drive, you will need some motor information. This is found on the motor nameplate. The information you will need is listed below:

- Base Volts
- Base frequency
- Base RPM
- Full load amps
- No load amps (mag current)
- Connection (star or delta)

Quick Setup Parameters

The following is a list of the Quick Setup parameters you must check before starting the drive. Set only the ones marked with “x” in the table below, under the intended mode of operation.

			V/Hz	SV	Vector
S1	Control Mode	Select the intended operating mode	x	x	x
S2	Max Speed	Motor RPM at full process speed	x	x	x
S7	V/F shape	Usually Linear. Choose fan curve only for fans	x		
S9	Motor Current	Motor full load current from motor nameplate	x	x	x
S12	Motor Base Freq	Motor nameplate frequency	x	x	x
S13	Motor Voltage	Motor nameplate voltage	x	x	x
S14	Nameplate RPM	Motor nameplate RPM	x	x	x
S15	Motor Poles	See Note		x	x
S17	Pulse Enc Volts	set between 10-20V to match encoder			x
S18	Encoder Lines	Pulses per Revolution of encoder			x
S19	Encoder Invert	Changes polarity of encoder feedback			x
S20	Autotune Enable	Drive will Autotune if started		x	x
S22	Mac Current	Enter the No-Load Amps from the motor nameplate	x	x*	x*

* if performing a Stationary Autotune.


Note Some of the parameters are product code dependent, that is, they are different for each frame size and power rating. For example, the unit will be set for either 50Hz or 60Hz operation:

Motor Poles for 60Hz 2 poles = 3600 rpm, 4 poles = 1800 rpm, 6 poles = 1200 rpm
 Motor Poles for 50Hz 2 poles = 3000 rpm, 4 poles = 1500 rpm, 6 poles = 1000 rpm

Autotune

This section is only for operating in Sensorless or Closed-loop Vector modes. If the drive is in V/Hz mode, Autotune is unnecessary and does not activate.

- Ensure that MAX SPEED is greater than NAMEPLATE RPM for a successful autotune.
- In the QUICK SETUP menu, set AUTOTUNE ENABLE (S20) to TRUE.

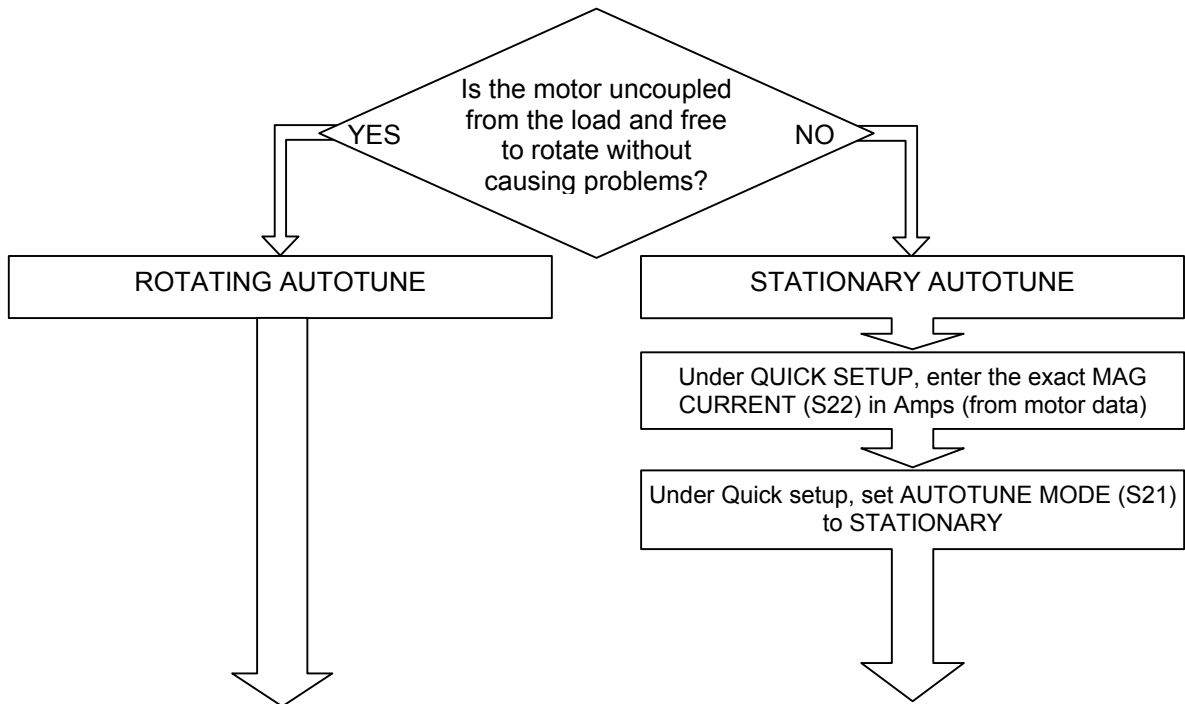

- On the 890CD keypad select LOCAL mode. Set the local setpoint, OP 1, to 0.0%.
- Press the green RUN button. The drive will begin autotuning. The drive will stop without errors if autotune is successful.
- Go to SYS::SAVE::APP and UP arrow to save your settings.



Running in Local


- On the 890CD keypad select LOCAL mode. The display will show the Local Setpoint : 0.0%
- Use the UP arrow to set a Local Setpoint, say 20%.
- Press the green RUN button. The motor will accelerate to the desired speed and maintain it. Adjust RAMP ACCEL TIME (S3) in Quick Setup to the desired level.
- Press the red STOP button. The motor will decelerate to a stop. Adjust RAMP DECEL TIME (S4) in Quick Setup to desired level. If the drive trips on Overvoltage, extend the RAMP DECEL TIME or connect a braking resistor. Refer to the 890 Engineering Reference Manual.

Go to SYS::SAVE::APP and UP arrow to save your settings Values are stored during power-down.

Running in Remote

- On the 890CD keypad select REMOTE mode. The display will show the remote Setpoint : ?.?% (The value displayed depends on the external speed reference).
- Dial in a speed setpoint using the Speed potentiometer until the display reads 20%.
- Start the drive by closing the Start contact between terminal X14/03 and terminal X15/02. The motor will accelerate to the desired speed and maintain it. Adjust RAMP ACCEL TIME (S4) in Quick Setup to the desired level.
- Open the Start contact. The motor will decelerate to a stop. Adjust RAMP DECEL TIME (S4) in Quick Setup to desired level. If the drive trips on Overvoltage, extend the RAMP DECEL TIME or connect a braking resistor. Refer to the 890 Engineering Reference Manual..

Go to SYS::SAVE::APP and UP arrow to save your settings Values are stored during power-down.

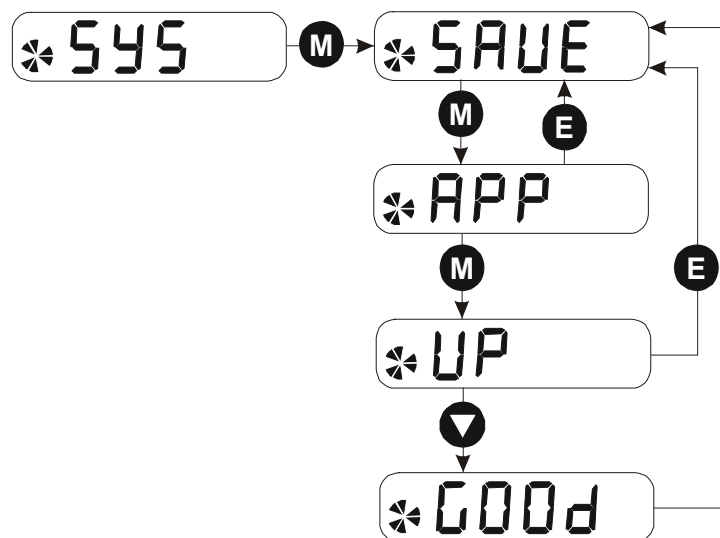

Appendix A: Using the 6511 Keypad





The 6511 is the keypad that comes as standard with any 890 product. It is a one-line backlit LCD with units and symbols for different functions. It can be used to setup and configure the 890. It can also be used to operate the drive in Local mode from its Start and Stop buttons.

From power-up, the keypad displays the Software Version, and then times-out to show the Remote Setpoint, as shown opposite.




To change Operating Mode:

On the 890CS you can change between local and remote mode from any point on the MMI. However, on the 890CD you must be at the top of the MMI, showing the software version, before you can change between local and remote modes.

Mode	Action
Remote to Local	Hold the Stop key  down until LOC is displayed 
Local to Remote	Hold the Stop key  down until LOC and  are removed

To display the software version (890CD):

Press  repeatedly to display software version.

To display the software version (890CS):

Press and hold  to display software version.

To display the line voltage rating (890CS):

As above, then press  or  to toggle between software version and line voltage

To Start in Local Mode:

Press 

To Stop in Local Mode:

Press 

Displays diagnostics, parameter and trip information

Displays the units for the value:
S for seconds, **A** for current in Amps, **V** for voltage in Volts, **%** for percentage, **Hz** for frequency in Hertz

Indicates motor shaft direction (890CD), or DC link enabled (890CS)




Indicates Local Mode (Remote Mode when not visible)

The Menu Structure

890CS

The main menu for the 890CS is shown below. The unit will initialise in Remote Mode from factory conditions. The Keypad will display the Output Power (%). This is the first of five diagnostics.

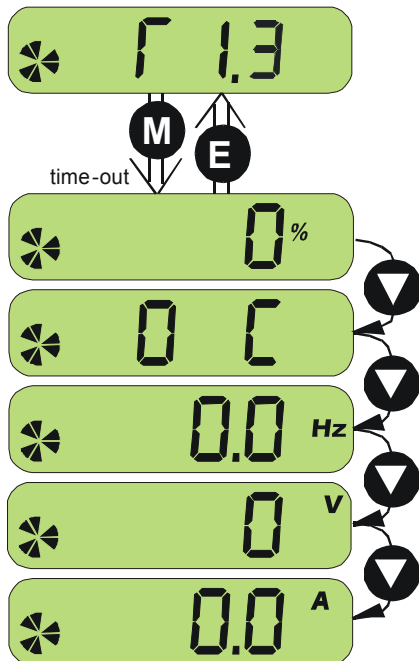

Welcome Screen Displays the software version of the unit

*From the Welcome Screen, the display times-out (alternatively you can press the **M** key) to show the first of 5 diagnostics:*

Output Power As a percentage of nominal full power for the selected input voltage

Heatsink Temp The heatsink temperature in Centigrade


Supply Frequency The real time frequency of the input supply in Hz

DC Link Volts $V_{ac} (rms) \times \sqrt{2} = dc \text{ link Volts}$ (when motor stopped)

Input Current The real time input current in Amps

890CD

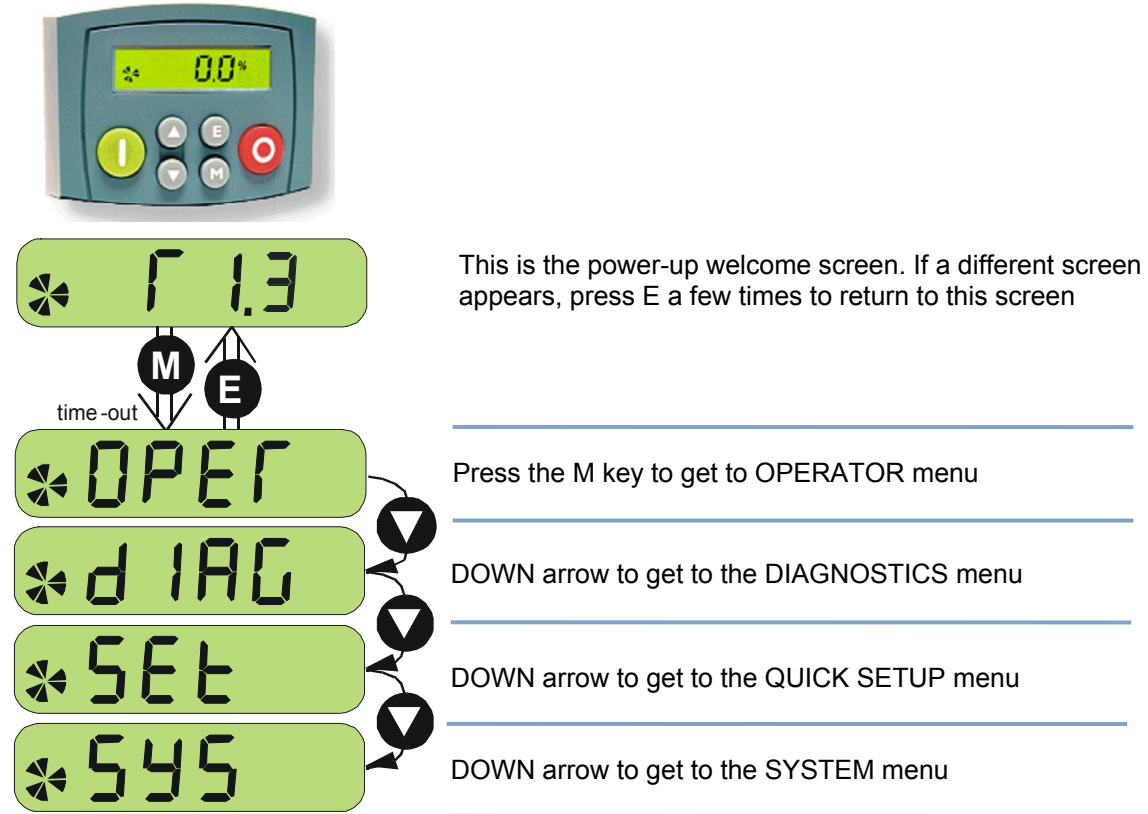

The main menus for the 890CD are shown below. Each menu contains parameters.






Note Refer to the *Engineering Reference Manual* for a list of available parameters.


How to Edit a Parameter

Press  to enter the SET::QUICKSETUP menu.

Scroll through the parameters using the  and  keys.

Press  to select a parameter for editing.

Increment/decrement the parameter value using the  and  keys.

Press  to exit the parameter.



Appendix B: Using the 6901 Keypad

The 6901 keypad can be plugged into any 890 product. It is a two-line backlit LCD display with units and symbols. It can be used to setup and configure the 890 in plain language. It can also be used to operate the drive in Local mode from its Start and Stop buttons, Jog and reverse.

To display the Software Version and Voltage Rating:

Press **E** repeatedly to display the Welcome Screen.

Press **M** to return to the Menus.

To Start in Local Mode:

Press **I**.

To Stop in Local Mode:

Press **O**.



Menus :	E : exit a menu	M : sub-menu or parameter	▲ : scroll up	▼ : scroll down
Parameters :	E : exit parameter	M : make writable	▲ : previous parameter	▼ : next parameter
Edit	E : stop editing	M : show PREF (hold)	▲ : inc value	▼ : dec value

To change Operating Mode:


From power-up, the keypad displays the Software Version, and then times-out to show the Remote Setpoint.

Mode	Action
Remote to Local	Toggle between modes using the L/R key L/R SEQ and REF LEDs are On when in Local
Local to Remote	Toggle between modes using the L/R key L/R SEQ and REF LEDs are Off when in Remote

The Menu Structure

890CD


The main menus for the 890CD are shown below. Each menu contains parameters.

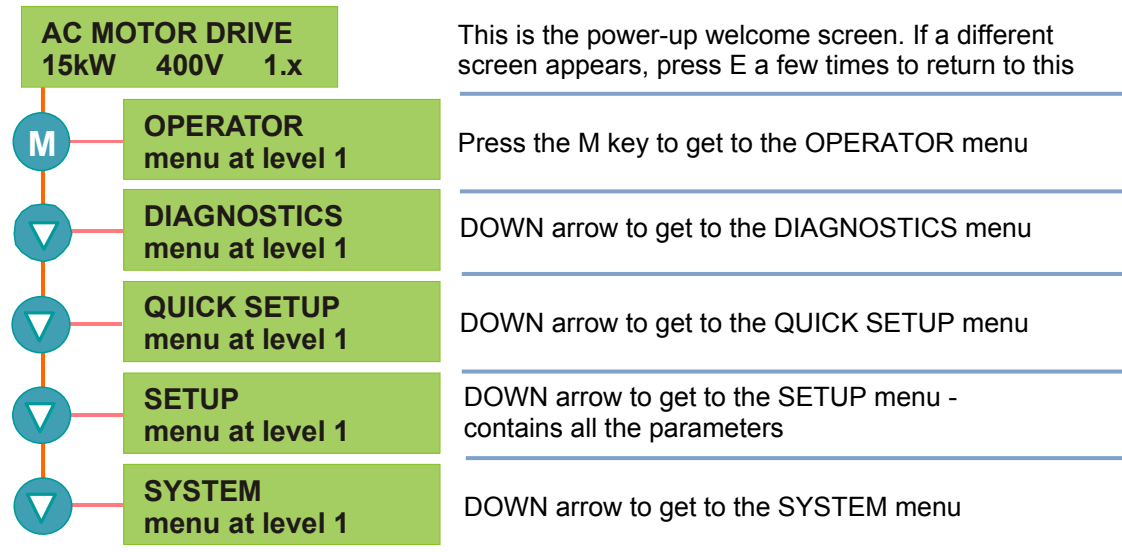

Note Refer to the Engineering Reference Manual for a list of available parameters.

890CS


The unit will initialise in Remote Mode from factory conditions. The Keypad will display the Output Power (%). This is the first of five diagnostics.

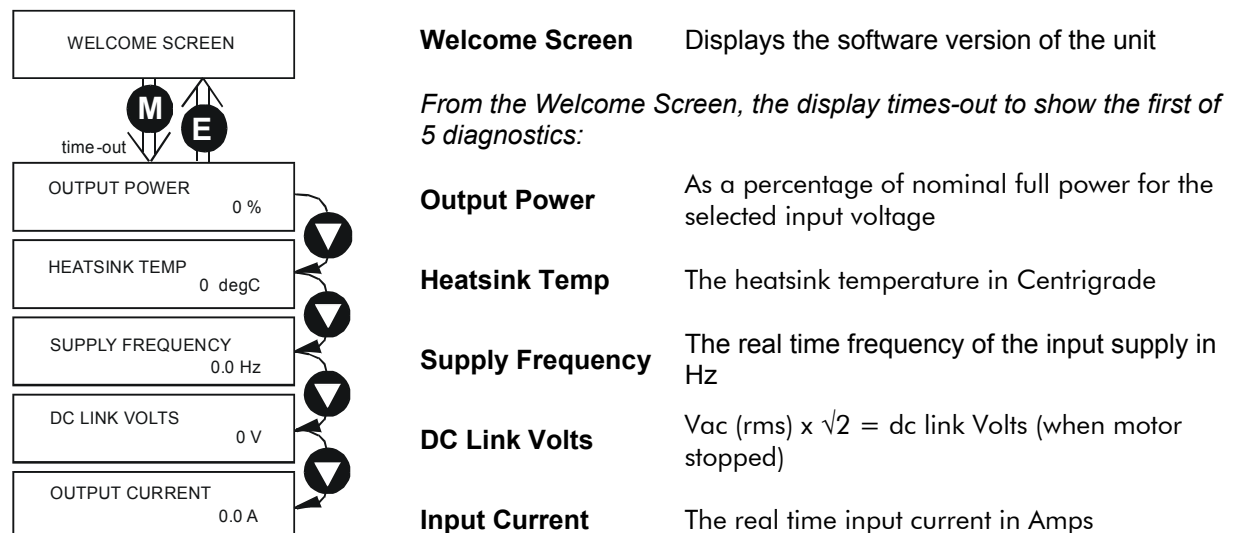

Appendix C: Analog and Digital I/O

890CD Control Connections


The terminal function names apply to the factory shipping configuration. These terminals may have different functions if the configuration has been modified using DSE.

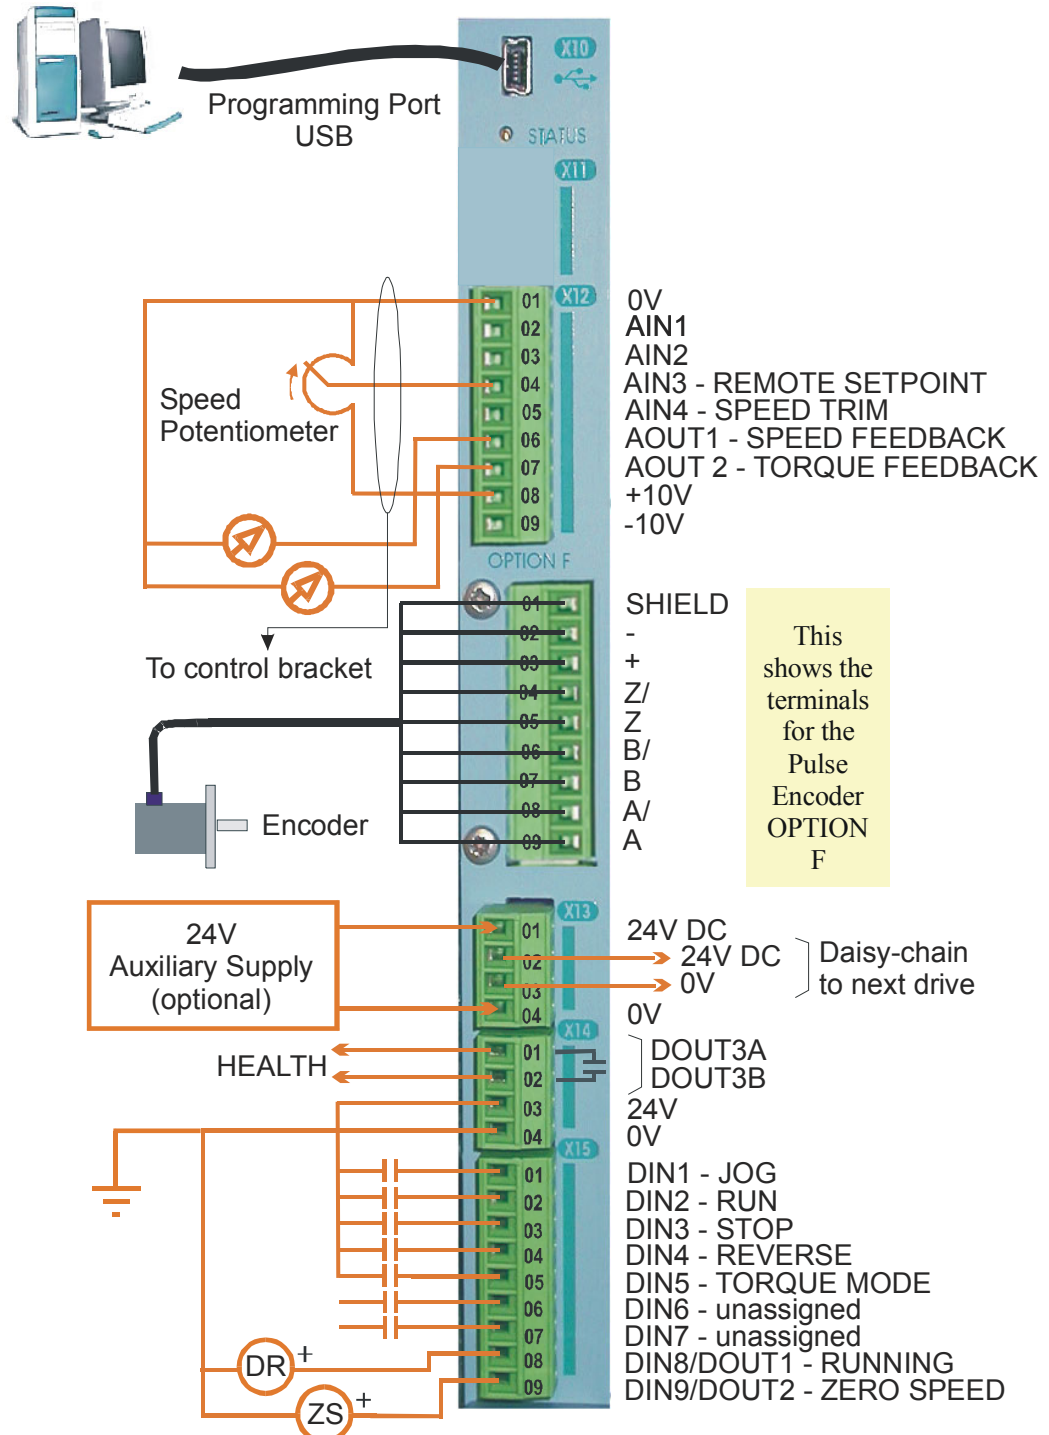

890CD Control terminals

The terminal function names apply to the factory shipping configuration. These terminals may have different functions if the configuration has been modified using DSE.


- Analog I/O connector is X12
- Analog I/O resolution is 12 bit plus sign
- Digital I/O connector is X15
- Digital I/O is 24VDC, sourced, active high

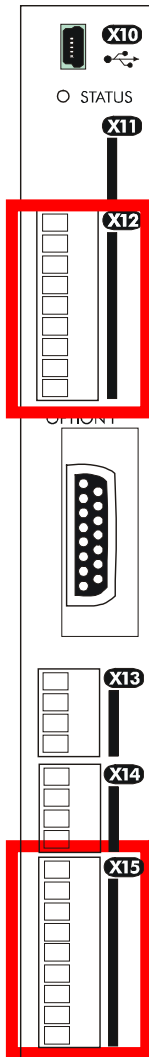

Terminal	Name	Range	Description
ANALOG I/O			
X12/01	0V		0V reference for analog I/O
X12/02	AIN1	0-10V, $\pm 10V$	Analog Input 1 Configurable (default = diff I/P +)
X12/03	AIN2	0-10V, $\pm 10V$	Analog Input 2 Configurable (default = diff I/P -)
X12/04	AIN3	$\pm 10V$, 0-10V, 0-20mA, 4-20mA	Analog Input 3 Configurable (default = remote setpoint I/P)
X12/05	AIN4	$\pm 10V$, 0-10V, 0-20mA, 4-20mA	Analog Input 4 Configurable (default = speed trim I/P)
X12/06	AOUT1	$\pm 10V$ (10V=100%speed)	Analog Output 1 Configurable (default = speed feedback O/P)
X12/07	AOUT2	$\pm 10V$ (10V=200% torque)	Analog Output 2 Configurable (default = torque feedback O/P)
X12/08	+10V REF	+10V	10V reference for analog i/o. Load 10mA maximum
X12/09	-10V REF	-10V	10V reference for analog i/o. Load 10mA maximum
DIGITAL I/O			
X15/01	DIN1	0 or 24V	Configurable Digital Input 1 (default = Jog)
X15/02	DIN2	0 or 24V	Configurable Digital Input 2 (default = Run)
X15/03	DIN3	0 or 24V	Configurable Digital Input 3 (default = Stop)
X15/04	DIN4	0 or 24V	Configurable Digital Input 4 (default = Reverse)
X15/05	DIN5	0 or 24V	Configurable Digital Input 5 (default = Torque mode)
X15/06	DIN6	0 or 24V	Configurable Digital Input 6 (default = Unassigned)
X15/07	DIN7	0 or 24V	Configurable Digital Input 7 (default = Unassigned)
X15/08	DIN8/DOUT1	0 or 24V	Configurable Digital Input/output (default : digital input = Running)
X15/09	DIN9/DOUT2	0 or 24V	Configurable Digital Input/output (default : digital input = Zero Speed)



890CS Control Terminals

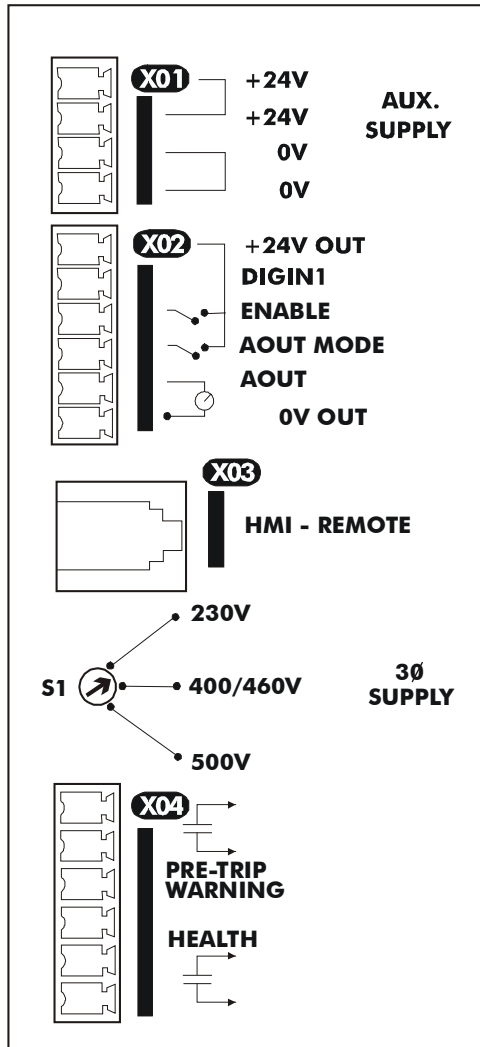

Terminal	Name	Range	Description
ANALOG I/O			
X01/01	+24V	24V	24V input from Auxiliary power supply
X01/02	+24V	24V	24V aux supply output to downstream drives
X01/03	0V	0V	0V aux supply output to downstream drives
X01/04	0V	0V	0V input from Auxiliary power supply
X02/05	AOUT	0-10V	Indication of Output Power or Input Current, selected by AOUT MODE. Scaled so that 5V is 100% nominal power or current
X02/06	0V OUT	0V	0V for AOUT
DIGITAL I/O			
X02/01	+24V OUT	24V	Supply for digital inputs
X02/02	DIGIN 1	-	Future use
X02/03	ENABLE	0 or 24V	Sequencing input to start the CS unit
X02/04	AOUT MODE	0 or 24V	Selects nature of AOUT: 0V = Output Power, 24V = Input Current
X04/01	PRE TRIP WARNING	Contact 1	Closed = HEALTHY, Open = WARNING
X04/02	PRE TRIP WARNING	Contact 1	Closed = HEALTHY, Open = WARNING
X04/05	HEALTH	Contact 2	Closed = HEALTHY, Open = TRIP
X04/06	HEALTH	Contact 2	Closed = HEALTHY, Open = TRIP

Appendix D: Electrical Ratings

890CS Common Bus Supply				
Output current must not be exceeded under steady state operating conditions. Operating voltage is 208V to 500V $\pm 10\%$. Output overload 150% overload for 60 seconds. Prospective short circuit current : Frame B 65kA, Frame D 100kA.				
FRAME B : 32A AC rms Input Current (nominal power 15kW)				
Model Number	890CS/5/0032B			
Nominal Operating Voltage	Vac	208/230	380/415	460 500
Output Power		7.5kW/10HP	15kW	25HP 18kW
Input Current	A	32		
Continuous RMS Output Current	A	40		
Dynamic Brake Current Rating	A	20	20	20 20
FRAME B : 54A AC rms Input Current (nominal power 30kW)				
Model Number	890CS/5/0054B			
Nominal Operating Voltage	Vac	208/230	380/415	460 500
Output Power		15kW/20HP	30kW	45HP 37kW
Input Current	A	54		
Continuous RMS Output Current	A	65		
Dynamic Brake Current Rating	A	40	40	40 40
FRAME D : 108A AC rms Input Current (nominal power 60kW)				
Model Number	890CS/5/0108D			
Nominal Operating Voltage	Vac	208/230	380/415	460 500
Output Power		30kW/40HP	60kW	90HP 75kW
Input Current	A	108		
Continuous RMS Output Current	A	135		
Dynamic Brake Current Rating	A	75	75	75 75
FRAME D : 162A AC rms Input Current (nominal power 90kW)				
Model Number	890CS/5/0162D			
Nominal Operating Voltage	Vac	208/230	380/415	460 500
Output Power		45kW/60HP	90kW	135HP 110kW
Input Current	A	162		
Continuous RMS Output Current	A	200		
Dynamic Brake Current Rating	A	100	100	100 100



890CD Common Bus Drive

Motor power, input current and output current ratings must not be exceeded under steady state operating conditions. Vector Mode 150% overload for 60 seconds. Servo Mode 200% overload for 4 seconds.

FRAME B Input currents listed at 320V DC, 560V DC and 650V DC assuming total source impedances of 400 μ H, 800 μ H and 800 μ H respectively.

Model Number	890CD/2/0003B	890CD/2/0005B	890CD/2/0007B	890CD/2/0011B	890CD/2/0016B
Nominal Supply Voltage Vdc	320				
Motor Power kW/Hp	0.55/0.75	1.1/1.5	1.5/2	2.2/3	4/5
Input Current - Vector Mode A	4.2	7.6	9.3	15.2	22.2
Output Current - 3kHz Vector Mode A	3	5.5	7	11	16.5
Output Current - 4kHz Servo Mode A	2.2	4	6	8	12

Model Number	890CD/5/0002B		890CD/5/0003B		890CD/5/0004B		890CD/5/0006B	
Nominal Supply Voltage Vdc	560	650-705	560	650-705	560	650-705	560	650-705
Motor Power	0.55kW	0.75Hp	1.1kW	1.5Hp	1.5kW	2Hp	2.2kW	3Hp
Input Current - Vector Mode A	2.9	2.8	5	4.9	6.6	6.5	8.6	7.2
Output Current - 3kHz Vector Mode A	2	2	3.5	3.5	4.5	4.5	6	5
Output Current - 4kHz Servo Mode A	1.5	1.5	2.5	2.5	3.5	3.5	4	4

Model Number	890CD/5/0010B		890CD/5/0012B		890CD/5/0016B		890CD/5/S016B	
Nominal Supply Voltage Vdc	560	650-705	560	650-705	560	650-705	560	650-705
Motor Power	4kW	5Hp	5.5kW	7.5Hp	7.5kW	10Hp	7.5kW	10Hp
Input Current - Vector Mode A	14.1	11.3	16.8	16.6	22.2	19.5	24*	21.2*
Output Current - 3kHz Vector Mode A	10	8	12	12	16	14	-	-
Output Current - 4kHz Servo Mode A	6	6	9	9	12	10	16	14

* Values are for "Input Current - Servo Mode".

890CD Common Bus Drive continued

Motor power, input current and output current ratings must not be exceeded under steady state operating conditions.
 Vector Mode 150% overload for 60 seconds. Servo Mode 200% overload for 4 seconds.

FRAME C Input currents listed at 320V DC, 560V DC and 650V DC assuming total source impedances of 400μH, 800μH and 800μH respectively.

Model Number		890CD/2/0024C		890CD/2/0030C			
Nominal Supply Voltage	Vdc	320					
Motor Power	kW/HP	5.5/7.5		7.5/10			
Input Current - Vector Mode	A	31		39			
Output Current - 3kHz Vector Mode	A	24		30			
Output Current - 4kHz Servo Mode	A	24		30			
Model Number		890CD/5/0024C		890CD/5/0030C		890CD/5/S030C	
Nominal Supply Voltage	Vdc	560	650-705	560	650-705	560	650-705
Motor Power	kW/HP	11kW	15HP	15kW	20HP	15kW	20HP
Input Current - Vector Mode	A	33	28	43	36	43	36
Output Current - 3kHz Vector Mode	A	24	24	30	27	30	30
Output Current - 4kHz Servo Mode	A	20	20	25	22	30	28
FRAME D Input currents listed at 560V DC or 650V DC assuming a total of 190μH source impedance.							
Model Number		890 CD/5/0039D		890CD/5/0045D		890/5/0059D	
Nominal Supply Voltage	Vdc	560	650-750	560	650-705	560	650-705
Motor Power	kW/HP	18.5kW	25HP	22kW	30HP	30kW	40HP
Input Current - Vector Mode	A	37	34	43	38	59	52
Output Current - 3kHz Vector Mode	A	39	35	45	40	59	52
Output Current - 4kHz Servo Mode	A	35	29	38	34	50	45

